



Electronic Doorkeeper VSE

First steps and basic
settings in the menu
navigation



AXT-electronic GmbH & Co. KG
Wartburgstraße 10 · 99817 Eisenach / GERMANY
Phone: 0049 3691 721070
service@axt-electronic.de · www.axt-electronic.eu

Settings at 1. Start – Basic Settings

1.	- activate the Menu (= hold Magnet for 3sec. at "OK/Menu") 1. Menu-Item = „Sprache“ > „Language“ you need to change it to english		SPRACHE DEUTSCH
2.	- Go into the menu-item with "OK" - With "down" set language to "2. English" - Confirm the setting with "OK" - The setting of the time-of-day follows directly...		LANGUAGE 2.ENGLISH
3.	2. Menu-Item = „time of day“ - Go into the menu-item with "OK"		TIME OF DAY 15:56
4.	- Cursor is positioned on <u>HOUR</u> hh:mm - Use up or down to set current hour - Confirm with OK		TIME OF DAY 15:56
5.	- Cursor is positioned on <u>MINUTE</u> hh:mm - Use up or down to set current minute - Confirm with OK - <i>The setting of the current date follows directly</i>		TIME OF DAY 15:56
6.	3. Menu-Item = „Date“ - Go into the menu-item with „OK“		DATE YY/MM/DD 2019/05/05
7.	- Cursor is positioned on <u>YEAR</u> Year/Month/Day - Use up or down to set current year - Confirm with ok		DATE YY/MM/DD 2019/05/05
8.	- Cursor is positioned on <u>MONTH</u> Year/Month/Day - Use up or down to set current month - Confirm with ok		DATE YY/MM/DD 2019/05/05
9.	- Cursor is positioned on <u>DAY</u> Year/Month/Day - Use up or down to set current day - Confirm with ok		DATE YY/MM/DD 2019/05/05

The use "ESC/Back" leads to canceling these three settings. Default values then are applied.
These can/have to be corrected later, see next points.

From this point on, the device can work correctly with our default settings.

The following is the default setting:

Opening: 8 (a.m.) at the earliest, when light

Closing: at dusk, but not later than 22h (10 p.m.)

Setting applies to all days of the week.

Menu operation from 2nd start

- Application examples

a) Set or correct the current time e.g. 14:30 o'clock (2:30 p.m.)

1.	- activate the Menu (= hold Magnet for 3sec. at "OK/Menu") - Menu item "Time" is already the 1st menu item. Further selection is therefore not necessary.		1.TIME OF DAY 15:56
2.	- Go into the menu-item with "OK"		TIME OF DAY 15:56
3.	- Cursor is positioned on <u>HOUR</u> hh:mm - Use up or down to set current hour - Confirm with OK		TIME OF DAY 14:56
4.	- Cursor is positioned on <u>MINUTE</u> hh:mm - Use up or down to set current minute - Confirm with OK		TIME OF DAY 14:30
5.	- Setting completed - "Saved" is displayed. The setting was changed successfully.		TIME OF DAY > SAVED
6.	- Cursor is back on menu-item "1. Time-of-day"		1.TIME OF DAY 14:30
7.	Press down to select a new menu item for setting, or select and confirm the last menu item "EXIT", or wait 1 minute and do not operate anything to have the menu guidance end automatically.		

b) Change language from English to French

1.	- activate the Menu (= hold Magnet for 3sec. at "OK/Menu")		TIME OF DAY 15:56
2.	- Use „down“ 3times to go to the menu-item „Language“		4. LANGUAGE ENGLISH
3.	- Go into the menu-item with "OK"		LANGUAGE 2. ENGLISH
4.	- With „down“ 1time change the language from „2. English“ to „3. Francais“	 	LANGUE 3. FRANCAIS
5.	- The language is saved and can be used immediately in the whole menu.		4. LANGUE FRANCAIS
Press down/up to select a new menu item for setting, or select and confirm the last menu item "EXIT", or wait 1 minute and do not operate anything to have the menu guidance end automatically.			

c) To open set "TIME ONLY" mode for all days.

1.	- activate the Menü (= hold Magnet for 3sec. at "OK/Menu")		TIME OF DAY 15:56
2.	- With „down“ 1time choose menu-item „Opening Mode“		2. OPENING MODE LUX AND TIME
3.	- Go into the menu-item with „OK“.		OPENING MODE 1. LUX AND TIME
4.	- With „down“ 2times chose the Mode „TIME ONLY“ and confirm with ok.	  	OPENING MODE 3. TIME ONLY
5.	- It is displayed the Opening time for Monday to Sunday (Mo-Su). - If you want to leave everything as it is, use „OK“ 3times in a row. The cursor goes one step further each and confirms the set values. - Finally, the setting is saved and the system returns to the Opening Mode menu-item.	  	OPENING TIME MO-SU 08:00 2. OPENING MODE TIME ONLY
6.	Press down/up to select a new menu item for setting, or select and confirm the last menu item "EXIT", or wait 1 minute and do not operate anything to have the menu guidance end automatically.		

d) For closing, set "LUX ONLY" mode, close only at dusk, no Time

1.	- activate the Menu (= hold Magnet for 3sec. at "OK/Menu")		TIME OF DAY 15:56
2.	- Mark the menu item "Closing Mode" with 2x "down". - Press Ok to enter the menu item.	  	3. CLOSING MODE LUX AND TIME
4.	- With 1x "down" select the mode "ONLY LUX" and confirm with Ok.	 	CLOSING MODE 2. LUX ONLY
5.	- The light threshold for closing is now requested. This is the sensitivity for detecting darkness. If you do not want to change anything, confirm the value with "OK". The default is 3 lux.		LIGHT THRESHOLD 03 LUX
6.	- The light delay for closing is now requested. This is a time value in minutes. The doorkeeper would close this value as a delay after detecting darkness. If you do not want to change anything, confirm and save the value with OK. The default value is 00 min, i.e. „no delay“		LIGHT DELAY 00 MIN
7.	- As " LUX ONLY " excludes a time control, nothing else needs to be set, so you immediately return to the menu item "Closing Mode". - The setting was successfully completed.		3. CLOSING MODE LUX ONLY
8.	Press down/up to select a new menu item for setting, or select and confirm the last menu item "EXIT", or wait 1 minute and do not operate anything to have the menu guidance end automatically.		

e) Set a different opening time for opening on weekends (e.g. SA-SU 9 o'clock, LUX AND TIME)

1.	- activate the Menu (= hold Magnet for 3sec. at "OK/Menu")		TIME OF DAY 15:56
2.	- With „down“ 1time choose menu-item „Opening Mode“		2.OPENING MODE LUX AND TIME
3.	- Go into the menu-item with „OK“.		OPENING MODE 1.LUX AND TIME
	- Use up / down to select the "LUX AND TIME" mode if it is not set but is to be used.		
	- Confirm the "LUX AND TIME" mode with OK if it has not already been set.		
5.	- Change the opening time selection from Monday-Sunday (MO-SU) with 1x "down" to Saturday - Sunday (SA-SU).		OPENING TIME MO-SU 08:00 OPENING TIME SA-SU 08:00
	- With 1x "OK" place the cursor on the HOUR hh:mm of the opening time.		
6.	- Use up and down to set the desired new opening time. If no minutes are to be set, confirm now with 2x "OK". Otherwise use 1x "OK", change the Minutes, and the 1x "OK" to save.	 	OPENING TIME SA-SU 09:00
7.	- You return to the main menu. The setting has been changed.		2.OPENING MODE LUX AND TIME
	- When the changed settings are shown after exiting the menu, note and control the Saturday and Sunday opening times.		
Press down/up to select a new menu item for setting, or select and confirm the last menu item "EXIT", or wait 1 minute and do not operate anything to have the menu guidance end automatically.			

f) For Closing, set a twilight delay of 30 minutes (e.g. in "LUX ONLY" mode).

1.	- activate the Menu (= hold Magnet for 3sec. at "OK/Menu")		TIME OF DAY 15:56
2.	- Select the menu item Closing Mode with 2x "down" and enter it with "OK".	 	3.CLOSING MODE LUX ONLY
3.	- Confirm the "LUX ONLY" mode with OK.		CLOSING MODE 2.LUX ONLY
4.	- Confirm the set light threshold with "OK" or change as required with "up/down".		LIGHT THRESHOLD 03 LUX
5.	- Use the "up/down" keys to set the desired minutes that the device should close after darkness is detected. 1 to 90 minutes can be set.		LIGHT DELAY 30 MIN
	- Confirm with „OK“.		3.CLOSING MODE LUX ONLY
6.	Press down/up to select a new menu item for setting, or select and confirm the last menu item "EXIT", or wait 1 minute and do not operate anything to have the menu guidance end automatically.		

The cases given are application examples which are intended to explain and describe the function of the menu in general. Other menus that are not displayed or explained are operated and set according to the same principle. There are also other options for setting and adjusting times that are not explained in the above illustrations. General information can be found in the main operating instructions.

We are providing some Videos on our Website with the settings above. Use the QR-Code to get to them:

Reactions to light / dark or manual operation result in the menu operation being terminated and the display being deactivated. If this happens, simply return to the menu. If possible, do not make settings at times when the device would probably have to change its status during operation due to already poor lighting conditions.



If the activation of the Menu (hold magnet on "OK/Menu" for 3 seconds) does not work immediately, remove the magnet for a few seconds and try again.